


# Storm Masta Class B Installation - Pavers

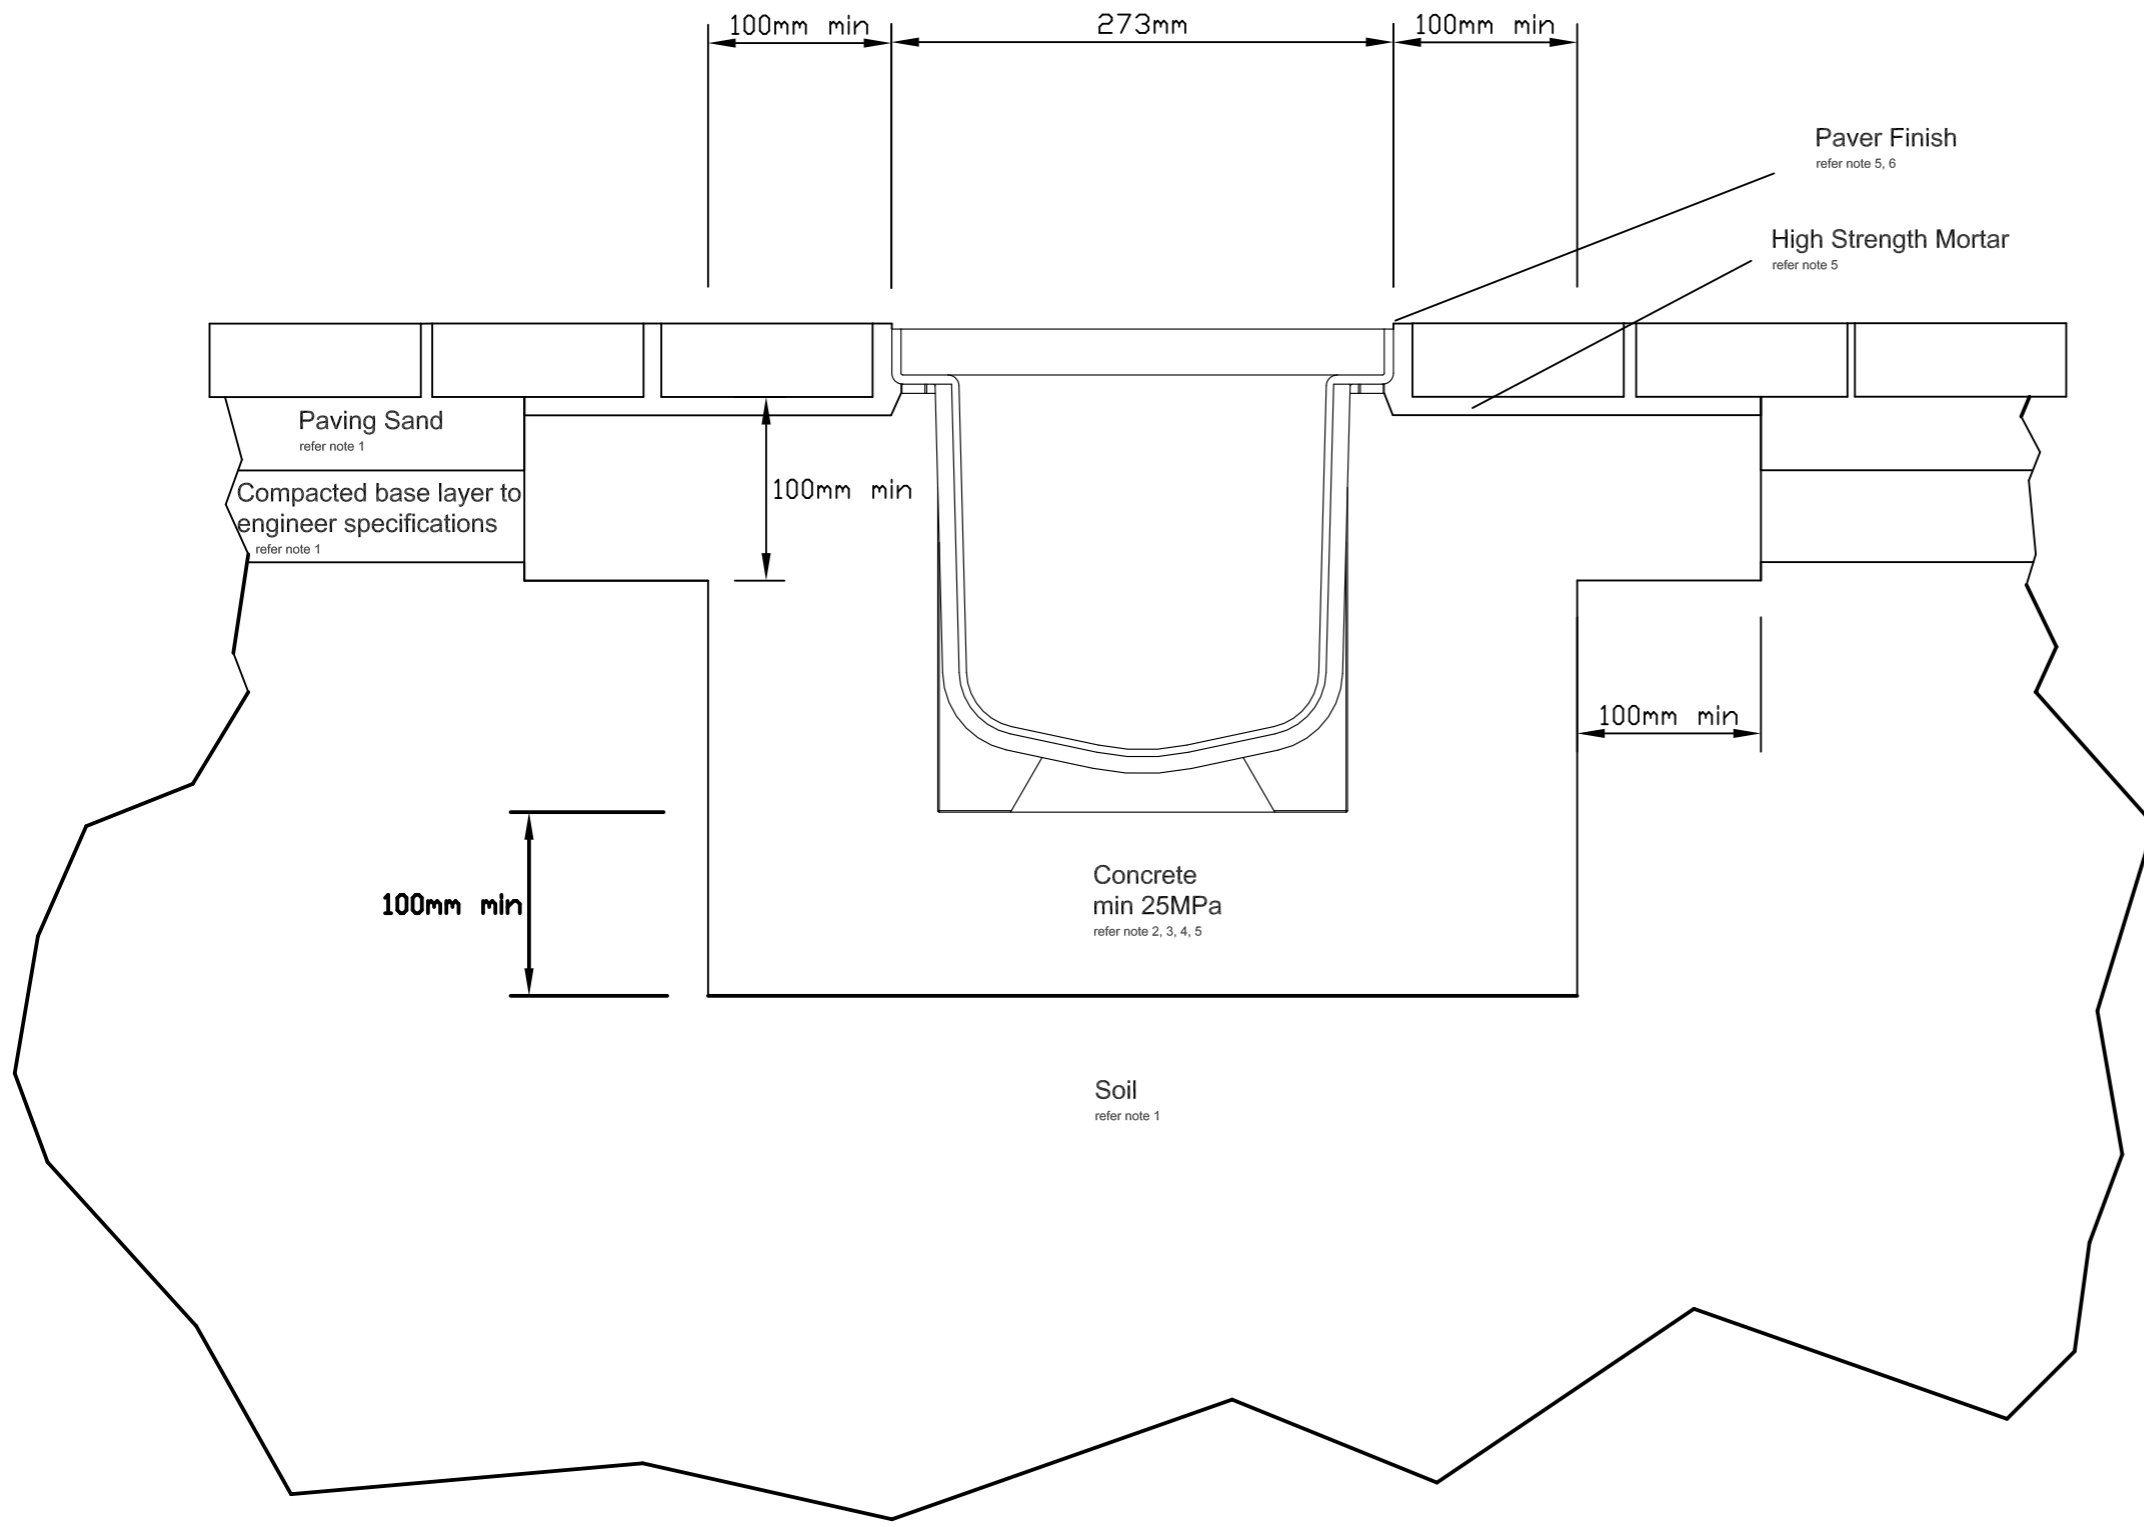

1. Carry out ground preparation, base layers, compaction, and paver laying design to engineers specifications. These installation requirements are general minimums and specific engineering advice may be required to suit specific site requirements.
2. Clip M12 reinforcing bars to underside of Storm Masta channel
3. Encase Storm Masta in concrete minimum strength 25MPa, reinforced to engineers specifications
4. Vibrate concrete to eliminate air pockets
5. Secure pavers adjacent to Storm Masta channel in high strength mortar
6. Finish top course 3mm above channel edge